	Instantion and Ass	embly Instructions 27' ALUMINUM TIP & ROLL LOW RISE BLEACHER
PERFORMANCE SPORTS SYSTEMS GARED	Gared Holdings, LLC 9200 E. 146th St. Noblesville, IN 46060	27 AEGMINION III & REV RIGE BELACHERT 3 ROW WITH DOUBLE FOOT PLANKS FILE LOC. Q:\Inventor Files\Installation Instructions\490,000,000 DATE 4/18/2014 SHT. NO. 1 OF 5 TRB0327DFLR ai

Introduction/Liability Disclaimers

Thank you for your purchase of the Tip & Roll Aluminum Bleachers. This guide will provide information on the proper assembly and installation methods of your bleachers.

Please note that a Bill of Materials is being included with this guide. Please check that all of the parts called out on the Bill of Materials are present prior to beginning assembly. Please do not substitute for factory parts. Please contact the PSS or Gared Sports customer service department and allow them to determine if substitute parts are acceptable.

It is recommended that an individual who has been properly trained perform assembly and set up of the bleachers. No one under the age of 18 should attempt assembly or set up of the unit, unless properly supervised.

To prevent normal wear and tear from shortening the life of the unit, preventative maintenance inspections and repairs should be performed at least once per year. If the units are subject to high or unusual usage, inspections should be scheduled to occur more frequently. If items are found to be nonconforming, replacements can be ordered from PSS or Gared Sports or one of our authorized dealers. When contacting PSS or Gared Sports, please have information regarding the dealer/installer who sold the unit, the name of the project, and any applicable warranty information.

800-325-2682 -- Gared Customers 800-848-8034 -- PSS Customers

Installation and Assembly Instructions



Gared Holdings, LLC 9200 E. 146th St. Noblesville, IN 46060 27' ALUMINUM TIP & ROLL LOW RISE BLEACHER 3 ROW WITH DOUBLE FOOT PLANKS

SHT. NO.

2 OF 5


DATE 4/18/2014

TRB0327DFLR ai


REV

	MATERIAL LIST					
ITEM	QTY	PART NUMBER	DESCRIPTION	LENGTH		
1	4	198011026-27	PLANK, FOOT 10" MILL FINISH X 27'	324.00 in		
2	3	198011031-27AN	PLANK, SEAT 12" ANNODIZED X 27'	324.00 in		
3	8	498011033	END CAP, BLEACHER SEAT			
4	70	498011035	MOUNTING CLIP			
5	10	498011037	CASTER - 4 X 1 1/4 POLY RIGID			
6	5	498011053	LOW RISE FRAME WELDMENT 3 ROW			
7	20	498011078	RUBBER PAD			
8	6	498011243	END CAP, 12" BLEACHER PLANK			
9	8	498011350	BRACE ANGLE - 74.5" LONG			
10	28	6044-11-00	1/8" POP RIVET			
11	70	501-5-18-16	BOLT, CARRIAGE 5/16-18 UNC X 1			
12	20	502-5-18-16	HEX BOLT, 5/16-18 UNC X 1			
13	40	502-5-18-20	HEX BOLT, 5/16-18 UNC X 1.25			
14	14	502-6-16-16	HEX BOLT, 3/8-16 UNC X 1			
15	20	545-5-18Z	HEX NUT, NYLON LOCK 5/16-18			
16	110	548-5-18Z	HEX NUT, SERRATED FLANGE 5/16-18			
17	14	548-6-16	HEX NUT, SERRATED FLANGE 3/8-16			
18	20	561-5	FLAT WASHER 5/16			

1. Pre-assemble the braces by laying them out in pairs. Place the angles in each pair back to back and connect with a 3/8" x 1" hex bolt and 3/8" Whizlock nut as shown in Figure 1.

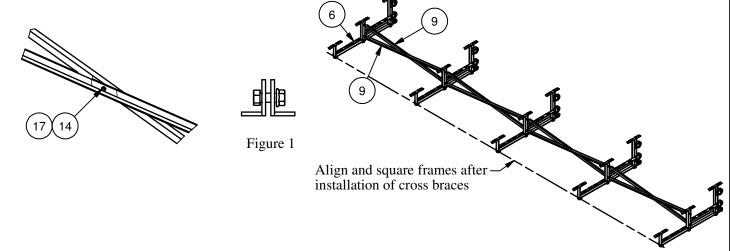

2. Pre-assemble the frames with the rubber pads and caster assemblies. Install a rubber foot at each hole location under the seat vertical and the angled position at the rear of the frame. Use the $5/16" \times 1-1/4"$ hex bolt, 5/16" flat washer between the head of the bolt and the rubber pad, and a 5/16 nylon lock nut (see figure 2). Attach two caster assemblies to each frame (see figure 3). Use the $5/16" \times 1"$ hex bolts and 5/16" whizlock nuts. Four bolts and nuts are requires for each caster assembly.

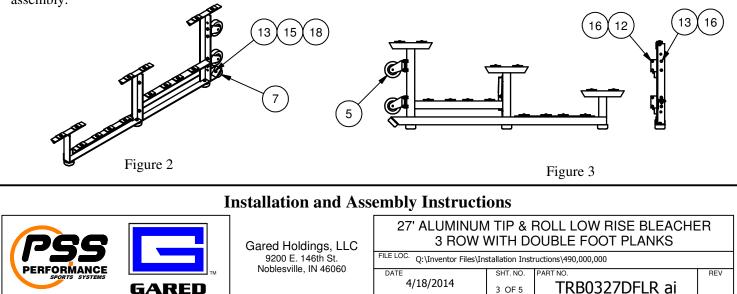

3. Lay out the Frame weldments approximately 6' apart. Install the brace sub-assemblies form step 1 using the 3/8" x 1" hex bolts and 3/8" whizlock nuts as shown in Figure 4.

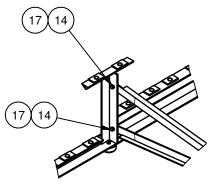


Figure 4

GARED


4. Install the end caps on each end of the seat planks, foot planks, and riser planks. Slide the end cap onto the plank with the holes on the underside of the plank. Using the holes in the end cap for a guide, drill a 1/8" hole and install the pop rivets to retain the end caps. See Figure 5.

1/8" Pop Rivet

TRB0327DFLR ai



5. Install the foot planks using the mounting clips, 5/16" carriage bolts, and 5/16" Whizlock. These mounting clips, bolts, and nuts are required at every frame position. Pre-install the mounting clips on the frame using the 5/16" x 1" carriage bolt and 5/16" whizlock nut. Only start the nuts a few threads to allow for the clips to be lifted and rotated into the channel of the bleacher plank.

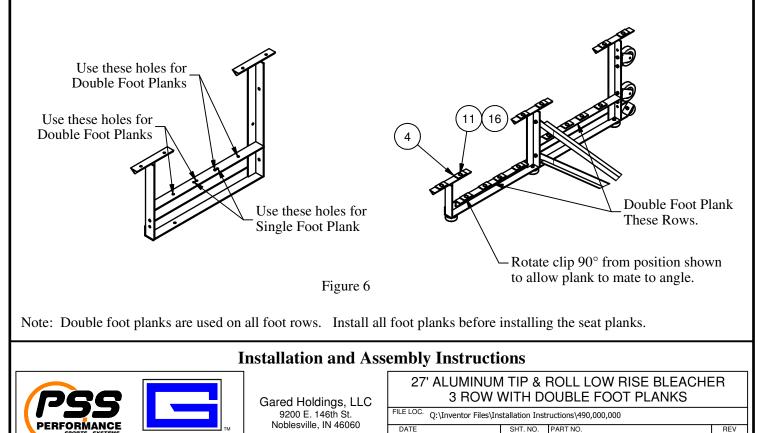

4/18/2014

4 OF 5

