## Introduction/Liability Disclaimers

Thank you for your purchase of the Tip & Roll Aluminum Bleachers. This guide will provide information on the proper assembly and installation methods of your bleachers.

Please note that a Bill of Materials is being included with this guide. Please check that all of the parts called out on the Bill of Materials are present prior to beginning assembly. Please do not substitute for factory parts. Please contact the PSS or Gared Sports customer service department and allow them to determine if substitute parts are acceptable.

It is recommended that an individual who has been properly trained perform assembly and set up of the bleachers. No one under the age of 18 should attempt assembly or set up of the unit, unless properly supervised.

To prevent normal wear and tear from shortening the life of the unit, preventative maintenance inspections and repairs should be performed at least once per year. If the units are subject to high or unusual usage, inspections should be scheduled to occur more frequently. If items are found to be nonconforming, replacements can be ordered from PSS or Gared Sports or one of our authorized dealers. When contacting PSS or Gared Sports, please have information regarding the dealer/installer who sold the unit, the name of the project, and any applicable warranty information.

800-325-2682 -- Gared Customers 800-848-8034 -- PSS Customers

## **Installation and Assembly Instructions**



Gared Holdings, LLC 9200 E. 146th St. Noblesville, IN 46060 7'-6" ALUMINUM TIP & ROLL BLEACHER 2 ROW WITH DOUBLE FOOT PLANKS

SHT. NO.

2 OF 5


DATE 4/15/2014

TRB0208DF ai

REV


MATERIAL LIST							
ITEM	QTY	PART NUMBER	T NUMBER DESCRIPTION				
1	2	198011026-8	PLANK, FOOT 10" MILL FINISH X 7.5'	90.00 in			
2	2	198011026-8AN	PLANK, SEAT 10" ANNODIZED X 7.5' 90.0				
3	2	498011030	BRACE ANGLE - 75.44 LONG				
4	8	498011033	END CAP, BLEACHER SEAT				
5	16	498011035	MOUNTING CLIP				
6	4	498011037	CASTER - 4 X 1 1/4 POLY RIGID				
7	2	498011385	FRAME WELDMENT 2 ROW TIP & ROLL				
8	6	498011078	RUBBER PAD				
9	16	6044-11-00	1/8" POP RIVET				
10	16	501-5-18-16	BOLT, CARRIAGE 5/16-18 UNC X 1				
11	16	502-5-18-16	HEX BOLT, 5/16-18 UNC X 1				
12	6	502-5-18-20	HEX BOLT, 5/16-18 UNC X 1.25				
13	5	502-6-16-16	HEX BOLT, 3/8-16 UNC X 1				
14	6	545-5-18Z	HEX NUT, NYLON LOCK 5/16-18				
15	32	548-5-18Z	HEX NUT, SERRATED FLANGE 5/16-18				
16	5	548-6-16	HEX NUT, SERRATED FLANGE 3/8-16				
17	6	561-5	FLAT WASHER 5/16				

1. Pre-assemble the braces by laying them out in pairs. Place the angles in each pair back to back and connect with a 3/8" x 1" hex bolt and 3/8" Whizlock nut as shown in Figure 1.

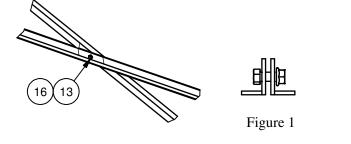

"hex bolt and 3/8" 7 1 Align and square frames after installation of cross braces

2. Pre-assemble the frames with the rubber pads and caster assemblies. Install a rubber foot at each hole location under the seat vertical and the angled position at the rear of the frame. Use the  $5/16" \times 1-1/4"$  hex bolt, 5/16" flat washer between the head of the bolt and the rubber pad, and a 5/16 nylon lock nut (see figure 2). Attach two caster assemblies to each frame (see figure 3). Use the  $5/16" \times 1"$  hex bolts and 5/16" whizlock nuts. Four bolts and nuts are requires for each caster assembly.

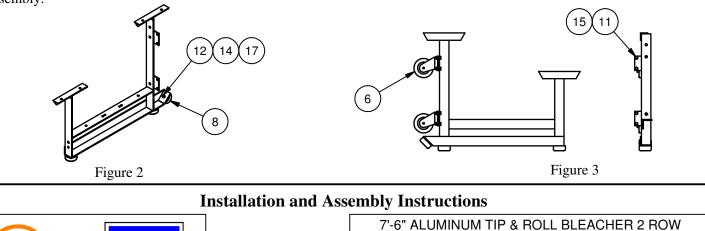

PCC		Gared Holdings, LLC 9200 E. 146th St. Noblesville, IN 46060	7'-6" ALUMINUM TIP & ROLL BLEACHER 2 ROW WITH DOUBLE FOOT PLANKS			
			FILE LOC. Q:\Inventor Files\Installation Instructions\490,000,000			
PERFORMANCE			DATE	SHT. NO.	PART NO.	REV
			4/15/2014	3 OF 5	TRB0208DF ai	

3. Lay out the Frame weldments approximately 4'-6" apart. Install the brace sub-assemblies form step 1 using the 3/8" x 1" hex bolts and 3/8" whizlock nuts as shown in Figure 4.

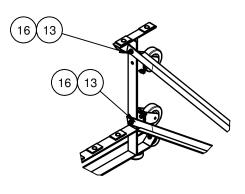


Figure 4

GARED


4. Install the end caps on each end of the seat planks, foot planks, and riser planks. Slide the end cap onto the plank with the holes on the underside of the plank. Using the holes in the end cap for a guide, drill a 1/8" hole and install the pop rivets to retain the end caps. See Figure 5.

1/8" Pop Rivet

TRB0208DF ai



5. Install the foot planks using the mounting clips, 5/16" carriage bolts, and 5/16" Whizlock. These mounting clips, bolts, and nuts are required at every frame position. Pre-install the mounting clips on the frame using the 5/16" x 1" carriage bolt and 5/16" whizlock nut. Only start the nuts a few threads to allow for the clips to be lifted and rotated into the channel of the bleacher plank.

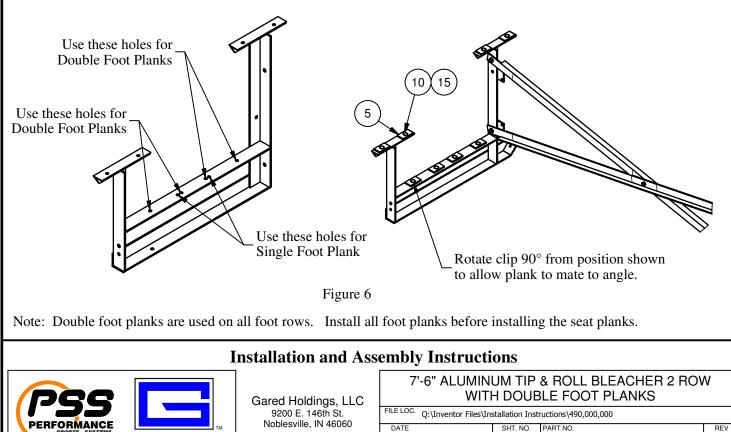

4/15/2014

4 OF 5

